



Setup Guide

TV Tuner Hardware Setup Instructions:

The TV tuner upgrade will add the following inputs to the back of your PC.



1. Connect your Cable line from the wall to the Cable connector on the back of the PC.



2. (optional) Connect an antenna to the Antenna connector to tune local over-the-air Television.



Setup Guide

3. The TV Tuner includes a Media Center Remote. The Built-in IR receiver (next to the LCD display) has been configured to work with this remote, rather than the Antec PAD remote.



4. (optional) The Media Center Remote included with the TV Tuner can be used with either the built-in IR remote sensor (configured through the iMon application) or the included USB IR receiver. To use the USB IR receiver, connect it to a USB port on the PC and place close to the Television. The remote must be able to "see" the receiver to function. After the computer is powered up, a red LED will flash whenever the receiver gets a command from the remote.





Setup Guide

5. (optional) A cable or satellite box can be connected using the Video and Audio input (requires S-Video cable and stereo RCA cables). Connect the S-Video output of the cable/satellite box to the Video input of the TV tuner card. Connect the audio outputs of the cable/satellite box to the Audio Input of the TV tuner Card (using the included headphone to RCA adapter if needed). The IR blaster output of the USB device can be used to change channels (see Step 5)

6. (optional) The USB IR receiver can also be used as an IR output to change the channel on another device, such as a cable or satellite box. To use this feature, plug the included USB LED into the headphone jack on the USB IR receiver. You can configure the control of your Cable or Satellite box through Windows Media Center.