


Hardware Setup:

1. Unpack the PC and cables from Box



2. Connect the HDMI Cable from the HDMI output on the PC to an HDMI input on the Television.

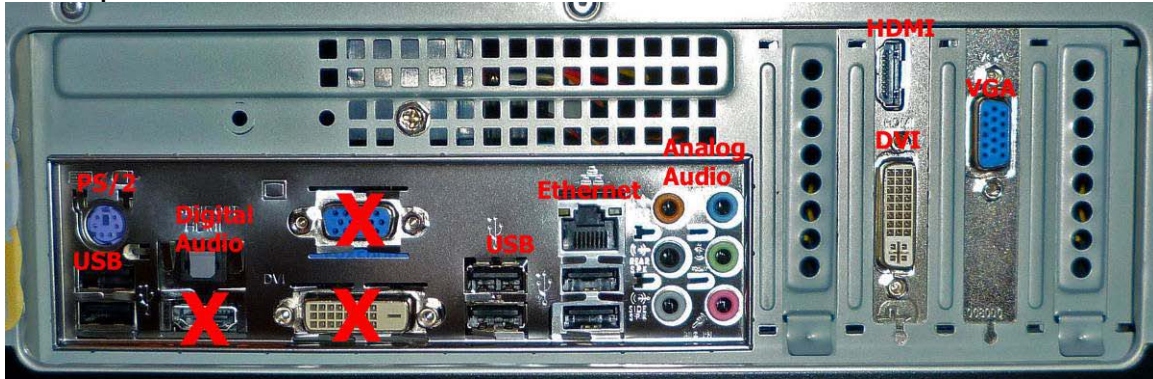

3. (optional) For digital output to a surround sound receiver without HDMI inputs, connect the Digital Audio output from the PC to an Optical audio port on the receiver (using the optical cable).



4. (optional) For analog output to a set of PC speakers or surround sound receiver, connect the Analog Audio outputs on the back of the PC to the corresponding connections on your speakers/receiver (green = front/stereo, orange = rear, black = subwoofer/center, gray = side)




Setup Guide

5. Connect a keyboard to the PS/2 connector (purple) or a USB connector on the back of the PC.
6. Connect a mouse to a USB connector on the back of the PC.
Note: If only the Media Center Program will be used, a keyboard and mouse are only required during initial setup, afterwards they are optional.
7. The Antec case includes a built-in IR remote sensor, which can be configured through the iMon application. The included remote can be used to control Windows Media functions. The USB IR receiver is only necessary if there is no line of sight to the built-in receiver.
8. If wireless internet is desired, plug the wireless adapter into a USB port. (a wireless router or modem and broadband internet connection are required). The PC also has an Ethernet port if a wired connection is desired (a wired router or modem and broadband internet connection are required).



Setup Guide

9. Plug the power cable into the back of the PC and into an electrical outlet (preferably surge protected).

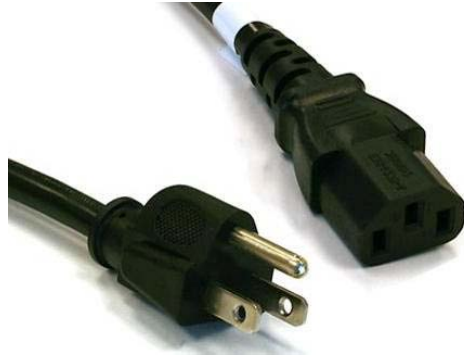

10. Press the Power button on the front of the PC and the Media Center program will start after Windows loads.

